

basIColor input 6 / 6 Pro

**In basIColor input (Pro) version 6.4.2 and up,
we support the following cameras with LibRaw 0.21.1**

- ASUS
 - ZenPhone4
 - ZenPhone6
- AVT
 - F-080C
 - F-145C
 - F-201C
 - F-510C
 - F-810C
- Adobe Digital Negative (DNG)
- AgfaPhoto DC-833m
- Alcatel 5035D
- Apple
 - iPad Pro
 - iPhone SE
 - iPhone 6s
 - iPhone 6 plus
 - iPhone 7
 - iPhone 7 plus
 - iPhone 8
 - iPhone 8 plus
 - iPhone X
 - iPhone 12 Pro
 - iPhone 12 Pro Max
 - iPhone 13 Pro
 - QuickTake 100
 - QuickTake 150
 - QuickTake 200
- AutelRobotics
 - XB015
 - XT705 (EVO II)
- BQ Aquarius U
- Baumer TXG14
- BlackMagic
 - Cinema Camera
 - Micro Cinema Camera
 - Pocket Cinema Camera
 - Production Camera 4k
 - URSA
 - URSA Mini 4k
 - URSA Mini 4.6k
 - URSA Mini Pro 4.6k
- CLAUSS pix500
- Canon
 - PowerShot 600
 - PowerShot A5

- PowerShot A5 Zoom
- PowerShot A50
- PowerShot A410 (CHDK hack)
- PowerShot A460 (CHDK hack)
- PowerShot A470 (CHDK hack)
- PowerShot A480 (CHDK hack)
- PowerShot A530 (CHDK hack)
- PowerShot A540 (CHDK hack)
- PowerShot A550 (CHDK hack)
- PowerShot A560 (CHDK hack)
- PowerShot A570 IS (CHDK hack)
- PowerShot A590 IS (CHDK hack)
- PowerShot A610 (CHDK hack)
- PowerShot A620 (CHDK hack)
- PowerShot A630 (CHDK hack)
- PowerShot A640 (CHDK hack)
- PowerShot A650 IS (CHDK hack)
- PowerShot A710 IS (CHDK hack)
- PowerShot A720 IS (CHDK hack)
- PowerShot A3300 IS (CHDK hack)
- PowerShot D10 (CHDK hack)
- PowerShot ELPH 130 IS / IXUS 140 / IXY 110F (CHDK hack)
- PowerShot ELPH 160 / IXUS 160 (CHDK hack)
- PowerShot Pro70
- PowerShot Pro90 IS
- PowerShot Pro1
- PowerShot G1
- PowerShot G1 X
- PowerShot G1 X Mark II
- PowerShot G1 X Mark III
- PowerShot G2
- PowerShot G3
- PowerShot G3 X
- PowerShot G5
- PowerShot G5 X
- PowerShot G5 X Mark II
- PowerShot G6
- PowerShot G7 (CHDK hack)
- PowerShot G7 X
- PowerShot G7 X Mark II
- PowerShot G7 X Mark III
- PowerShot G9
- PowerShot G9 X
- PowerShot G9 X Mark II
- PowerShot G10
- PowerShot G11
- PowerShot G12
- PowerShot G15
- PowerShot G16
- PowerShot S2 IS (CHDK hack)
- PowerShot S3 IS (CHDK hack)
- PowerShot S5 IS (CHDK hack)
- PowerShot SD300 / IXUS 40 / IXY Digital 50 (CHDK hack)
- PowerShot SD750 / IXUS 75 / IXY Digital 90 (CHDK hack)
- PowerShot SD900 / Digital IXUS 900 Ti / IXY Digital 1000 (CHDK hack)
- PowerShot SD950 IS / Digital IXUS 960 IS / IXY Digital 2000 IS (CHDK hack)
- PowerShot SD1200 IS / Digital IXUS 95 IS / IXY Digital 110 IS (CHDK hack)
- PowerShot S30
- PowerShot S40
- PowerShot S45

- PowerShot S50
- PowerShot S60
- PowerShot S70
- PowerShot S90
- PowerShot S95
- PowerShot S100
- PowerShot S110
- PowerShot S120
- PowerShot SX1 IS
- PowerShot SX40 HS (CHDK hack, CR2)
- PowerShot SX50 HS
- PowerShot SX60 HS
- PowerShot SX70 HS
- PowerShot SX100 IS (CHDK hack)
- PowerShot SX110 IS (CHDK hack)
- PowerShot SX120 IS (CHDK hack)
- PowerShot SX130 IS (CHDK hack)
- PowerShot SX160 IS (CHDK hack)
- PowerShot SX220 HS (CHDK hack)
- PowerShot SX510 HS (CHDK hack)
- PowerShot SX710 HS (CHDK hack)
- PowerShot SX10 IS (CHDK hack)
- PowerShot SX20 IS (CHDK hack)
- PowerShot SX30 IS (CHDK hack)
- EOS R
- EOS RP
- EOS R3
- EOS R5
- EOS R6
- EOS R7
- EOS R10
- EOS D30
- EOS D60
- EOS 5DS
- EOS 5DS R
- EOS 5D
- EOS 5D Mark II
- EOS 5D Mark III
- EOS 5D Mark IV
- EOS 6D
- EOS 6D Mark II
- EOS 7D
- EOS 7D Mark II
- EOS 10D
- EOS 20D
- EOS 20Da
- EOS 30D
- EOS 40D
- EOS 50D
- EOS 60D
- EOS 60Da
- EOS 70D
- EOS 77D / 9000D
- EOS 80D
- EOS 90D
- EOS 100D / Rebel SL1 / Kiss X7
- EOS 200D / Rebel SL2 / Kiss X9
- EOS 250D / 200D II / Rebel SL3 / Kiss X10
- EOS 300D / Digital Rebel / Kiss Digital
- EOS 350D / Digital Rebel XT / Kiss Digital N

- EOS 400D / Digital Rebel XTi / Kiss Digital X
- EOS 450D / Digital Rebel XSi / Kiss X2
- EOS 500D / Rebel T1i / Kiss X3
- EOS 550D / Rebel T2i / Kiss X4
- EOS 600D / Rebel T3i / Kiss X5
- EOS 650D / Rebel T4i / Kiss X6i
- EOS 700D / Rebel T5i / Kiss X7i
- EOS 750D / Rebel T6i / Kiss X8i
- EOS 760D / Rebel T6S / 8000D
- EOS 800D / Rebel T7i / Kiss X9i
- EOS 850D / Rebel T8i / Kiss X10i
- EOS 1000D / Digital Rebel XS / Kiss F
- EOS 1100D / Rebel T3 / Kiss X50
- EOS 1200D / Kiss X70 / REBEL T5 / Hi
- EOS 1300D / Rebel T6 / Kiss X80
- EOS 1500D / 2000D / Rebel T7 / Kiss X90
- EOS 3000D / 4000D / Rebel T100
- EOS D2000
- EOS M
- EOS M2
- EOS M3
- EOS M5
- EOS M6
- EOS M6 Mark II
- EOS M10
- EOS M50 / Kiss M
- EOS M50 Mark II
- EOS M100
- EOS M200
- EOS-1D C
- EOS-1D X
- EOS-1D X Mark II
- EOS-1D X Mark III
- EOS-1D
- EOS-1D Mark II
- EOS-1D Mark II N
- EOS-1D Mark III
- EOS-1D Mark IV
- EOS-1Ds
- EOS-1Ds Mark II
- EOS-1Ds Mark III
- Casio
 - QV-2000UX (secret menu hack)
 - QV-3000EX (secret menu hack)
 - QV-3500EX (secret menu hack)
 - QV-4000 (secret menu hack)
 - QV-5700 (secret menu hack)
 - QV-R41
 - QV-R51
 - QV-R61
 - EX-F1
 - EX-FC300S
 - EX-FC400S
 - EX-FH20
 - EX-FH25
 - EX-FH100
 - EX-S20 / M20
 - EX-S100
 - EX-Z4
 - EX-Z50

- EX-Z500
- EX-Z55
- EX-Z60
- EX-Z75
- EX-Z750
- EX-Z8
- EX-Z850
- EX-Z1050
- EX-ZR100
- EX-Z1080
- EX-ZR700
- EX-ZR710
- EX-ZR750
- EX-ZR800
- EX-ZR850
- EX-ZR1000
- EX-ZR1100
- EX-ZR1200
- EX-ZR1300
- EX-ZR1500
- EX-ZR3000
- EX-ZR3100
- EX-ZR3200
- EX-ZR3500
- EX-ZR3600
- EX-ZR3700
- EX-ZR4000 / 5000
- EX-ZR4100 / 5100
- EX-100
- EX-100F
- EX-100PRO
- EX-10
- EX-P505 (secret menu hack)
- EX-P600 (secret menu hack)
- EX-P700 (secret menu hack)
- Contax N Digital
- Creative PC-CAM 600
- DJI
 - 4384x3288
 - Mavic Air
 - Mavic Air2
 - Mavic Air 2S
 - Mavic Mini2
 - Mavic 3
 - Osmo Action
 - Pocket
 - Phantom4 Pro/Pro+
 - Zenmuse X5
 - Zenmuse X5R
- DXO One
- Digital Bolex
 - D16
 - D16M
- Epson
 - R-D1
 - R-D1s
 - R-D1x
- Eyedeas E1
- Foculus 531C
- FujiFilm

- DBP for GX680 / DX-2000
- E550
- E900
- F500EXR / F505EXR
- F550EXR
- F600EXR / F605EXR
- F700
- F710
- F770EXR / F775EXR
- F800EXR
- F810
- F900EXR
- S2Pro
- S3Pro
- S5Pro
- S20Pro
- S1
- S100FS
- S5000
- S5100 / S5500
- S5200 / S5600
- S6000fd / S6500fd
- S7000
- S9000 / S9500
- S9100 / S9600
- S200EXR / S205EXR
- SL1000
- HS10/HS11
- HS20EXR / HS22EXR
- HS30EXR / HS33EXR / HS35EXR
- HS50EXR
- GFX 50S
- GFX 50S II
- GFX 50R
- GFX 100
- GFX 100S
- X-Pro1
- X-Pro2
- X-Pro3
- X-S1
- XQ1
- XQ2
- X100
- X100F
- X100S
- X100T
- X100V
- X10
- X20
- X30
- X70
- X-A1
- X-A2
- X-A3
- X-A5
- X-A7
- X-A10
- X-A20
- X-E1
- X-E2

- X-E2S
- X-E3
- X-E4
- X-M1
- XF1
- XF10
- X-H1
- X-H2S
- X-T1
- X-S10
- X-T1 Graphite Silver
- X-T2
- X-T3
- X-T4
- X-T10
- X-T20
- X-T30
- X-T30 II
- X-T100
- X-T200
- IS-1
- GITUP
 - GIT2
 - GIT2P
 - G3 DUO (16:9 mode only)
- Gione E7
- Google
 - Pixel
 - Pixel XL
 - Pixel 3a
 - Pixel 4 XL
 - Pixel 4a (5G)
 - Pixel 5
- HTC
 - UltraPixel
 - MyTouch 4G
 - One (A9)
 - One (M9)
 - 10
 - U12
- Hasselblad
 - H2D-22
 - H2D-39
 - H3DII-22
 - H3DII-31
 - H3DII-39
 - H3DII-50
 - H3D-22
 - H3D-31
 - H3D-39
 - H4D-60
 - H4D-50
 - H4D-40
 - H4D-31
 - H5D-60
 - H5D-50
 - H5D-50c
 - H5D-40
 - H6D-100c
 - A6D-100c

- CFV
- CFV-50
- CFV II 50C
- CFH
- CF-22
- CF-31
- CF-39
- V96C
- L1D-20c (DJI Mavic 2 Pro)
- Lusso
- Lunar
- True Zoom
- Stellar
- Stellar II
- HV
- X1D
- X1D II 50C
- Huawei
 - P8 Lite (PRA-LX1)
 - P9 (EVA-L09/AL00)
 - P10 (VTR-L09)
 - P10+ (VKY-L09)
 - P10 Lite (WAS-LX1A)
 - P20 (EML-L09)
 - P20 Lite (ANE-LX1)
 - P20 Pro (CLT-L29/L09)
 - P30 Pro (VOG-L29)
 - Honor6a
 - Honor7a pro
 - Honor8 (FRD-L09)
 - Honor9
 - Honor10
 - Honor20
 - Honor View 10 (BKL-L09)
 - Honor View 20 (PCT-L29)
 - Honor 20 Pro (YAL-L41)
 - Mate8 (NXT-L29)
 - Mate10 (BLA-L29)
 - Mate20 Pro (LYA-L29)
 - Mate20 Lite (SNE-LX1)
- ISG 2020x1520
- Ikonoskop
 - A-Cam dII Panchromatic
 - A-Cam dII
- Imacon
 - Ixpress 96, 96C
 - Ixpress 384, 384C (single shot only)
 - Ixpress 132C
 - Ixpress 528C (single shot only)
- JaiPulnix
 - BB-500CL
 - BB-500GE
- Kandao QooCam 8K
- Kinefinity
 - KineMINI
 - KineRAW Mini
 - KineRAW S35
- Kodak
 - DC20
 - DC25

- DC40
- DC50
- DC120
- DCS200
- DCS315C
- DCS330C
- DCS420
- DCS460
- DCS460M
- DCS460
- DCS520C
- DCS560C
- DCS620C
- DCS620X
- DCS660C
- DCS660M
- DCS720X
- DCS760C
- DCS760M
- EOSDCS1
- EOSDCS3
- NC2000
- ProBack
- PB645C
- PB645H
- PB645M
- DCS Pro 14n
- DCS Pro 14nx
- DCS Pro SLR/c
- DCS Pro SLR/n
- C330
- C603
- P850
- P880
- PIXPRO AZ901
- PIXPRO S-1
- Z980
- Z981
- Z990
- Z1015
- KAI-0340
- Konica
 - KD-400Z
 - KD-510Z
- LG
 - G3
 - G4
 - G5 (H850)
 - G6
 - V20 (F800K)
 - V20 (H910)
 - VS995
- Leaf
 - AFi 5
 - AFi 6
 - AFi 7
 - AFi-II 6
 - AFi-II 7
 - AFi-II 10
 - AFi-II 10R

- Aptus-II 5
- Aptus-II 6
- Aptus-II 7
- Aptus-II 8
- Aptus-II 10
- Aptus-II 12
- Aptus-II 12R
- Aptus 17
- Aptus 22
- Aptus 54S
- Aptus 65
- Aptus 65S
- Aptus 75
- Aptus 75S
- Cantare
- Cantare XY
- CatchLight
- CMost
- Credo 40
- Credo 50
- Credo 60
- Credo 80
- DCB-II
- Valeo 6
- Valeo 11
- Valeo 17
- Valeo 17wi
- Valeo 22
- Valeo 22wi
- Volare
- Leica
 - C (Typ 112)
 - CL
 - C-Lux / CAM-DC25
 - Digilux 2
 - Digilux 3
 - Digital-Modul-R
 - D-LUX2
 - D-LUX3
 - D-LUX4
 - D-LUX5
 - D-LUX6
 - D-LUX7
 - D-Lux (Typ 109)
 - M8
 - M8.2
 - M9
 - M10
 - M10-D
 - M10-P
 - M10-R
 - M10 Monochrom
 - M11
 - M (Typ 240)
 - M (Typ 262)
 - Monochrom (Typ 240)
 - Monochrom (Typ 246)
 - M-D (Typ 262)
 - M-E
 - M-P

- R8
- Q (Typ 116)
- Q-P
- Q2
- Q2 Monochrom
- S
- S2
- S3
- S (Typ 007)
- SL (Typ 601)
- SL2
- SL2-S
- T (Typ 701)
- TL
- TL2
- X1
- X (Typ 113)
- X2
- X-E (Typ 102)
- X-U (Typ 113)
- V-LUX1
- V-LUX2
- V-LUX3
- V-LUX4
- V-LUX5
- V-Lux (Typ 114)
- X VARIO (Typ 107)
- Lenovo a820
- Logitech Fotoman Pixtura
- Mamiya ZD
- Matrix 4608x3288
- Meizy MX4
- Micron 2010
- Minolta
 - RD175 / Agfa ActionCam
 - DiIMAGE 5
 - DiIMAGE 7
 - DiIMAGE 7i
 - DiIMAGE 7Hi
 - DiIMAGE A1
 - DiIMAGE A2
 - DiIMAGE A200
 - DiIMAGE G400
 - DiIMAGE G500
 - DiIMAGE G530
 - DiIMAGE G600
 - DiIMAGE Z2
 - Alpha/Dynax/Maxxum 5D
 - Alpha/Dynax/Maxxum 7D
- Motorola
 - PIXL
 - Moto G (5S)
 - Moto G7 Play
- Nikon
 - D1
 - D1H
 - D1X
 - D2H
 - D2Hs
 - D2X

- D2Xs
- D3
- D3s
- D3X
- D4
- D4s
- D40
- D40X
- D5
- D50
- D6
- D60
- D70
- D70s
- D80
- D90
- D100
- D200
- D300
- D300s
- D500
- D600
- D610
- D700
- D750
- D780
- D800
- D800E
- D810
- D810A
- D850
- D3000
- D3100
- D3200
- D3300
- D3400
- D3500
- D5000
- D5100
- D5200
- D5300
- D5500
- D5600
- D7000
- D7100
- D7200
- D7500
- Df
- Z 5
- Z 6
- Z 6 II
- Z 7
- Z 7 II
- Z 9 (HE/HE* formats are not supported yet)
- Z 50
- Z fc
- 1 AW1
- 1 J1
- 1 J2
- 1 J3

- 1 J4
- 1 J5
- 1 S1
- 1 S2
- 1 V1
- 1 V2
- 1 V3
- Coolpix 700 ("DIAG RAW" hack)
- Coolpix 800 ("DIAG RAW" hack)
- Coolpix 880 ("DIAG RAW" hack)
- Coolpix 900 ("DIAG RAW" hack)
- Coolpix 950 ("DIAG RAW" hack)
- Coolpix 990 ("DIAG RAW" hack)
- Coolpix 995 ("DIAG RAW" hack)
- Coolpix 2100 ("DIAG RAW" hack)
- Coolpix 2500 ("DIAG RAW" hack)
- Coolpix 3200 ("DIAG RAW" hack)
- Coolpix 3700 ("DIAG RAW" hack)
- Coolpix 4300 ("DIAG RAW" hack)
- Coolpix 4500 ("DIAG RAW" hack)
- Coolpix 5000
- Coolpix 5400
- Coolpix 5700
- Coolpix 8400
- Coolpix 8700
- Coolpix 8800
- Coolpix A
- Coolpix A1000
- Coolpix B700
- Coolpix P330
- Coolpix P340
- Coolpix P950
- Coolpix P6000
- Coolpix P1000
- Coolpix P7000
- Coolpix P7100
- Coolpix P7700
- Coolpix P7800
- Coolpix S6 ("DIAG RAW" hack)
- Coolscan NEF
- Nokia
 - 7 Plus
 - 8.3 5G
 - 9
 - N95
 - X2
 - 1200x1600
 - Lumia 930
 - Lumia 950 XL
 - Lumia 1020
 - Lumia 1520
- OM Digital Solutions OM-1
- Olympus
 - AIR A01
 - C-3030Z
 - C-5050Z
 - C-5060WZ
 - C-7070WZ
 - C-70Z / C-7000Z
 - C-740UZ

- C-770UZ
- C-8080WZ
- X200 / D-560Z / C-350Z
- E-1
- E-3
- E-5
- E-10
- E-20 / E-20N / E-20P
- E-30
- E-300
- E-330
- E-400
- E-410
- E-420
- E-450
- E-500
- E-510
- E-520
- E-600
- E-620
- E-P1
- E-P2
- E-P3
- E-P5
- E-P7
- E-PL1
- E-PL1s
- E-PL2
- E-PL3
- E-PL5
- E-PL6
- E-PL7
- E-PL8
- E-PL9
- E-PL10
- E-PM1
- E-PM2
- E-M1
- E-M1 Mark II
- E-M1 Mark III
- E-M1X
- E-M10
- E-M10 Mark II
- E-M10 Mark III
- E-M10 Mark IV
- E-M5
- E-M5 Mark II
- E-M5 Mark III
- Pen-F
- SP-310
- SP-320
- SP-350
- SP-500UZ
- SP-510UZ
- SP-550UZ
- SP-560UZ
- SP-565UZ
- SP-570UZ
- Stylus 1
- Stylus 1s

- SH-2
- SH-3
- TG-4
- TG-5
- TG-6
- XZ-1
- XZ-2
- XZ-10
- OmniVision
 - 4688
 - OV5647
 - OV5648
 - OV8850
 - 13860
- OnePlus
 - 6 (A6003)
 - 6T
 - 7 Pro (GM1913)
 - 8 Pro (IN2023)
 - One
 - A3303
 - A5000
- PARROT
 - Anafi
 - Bebop 2
 - Bebop Drone
- Panasonic
 - DMC-CM1
 - DMC-FZ8
 - DMC-FZ18
 - DMC-FZ28
 - DMC-FZ30
 - DMC-FZ35 / FZ38
 - DMC-FZ40 / FZ42 / FZ45
 - DMC-FZ50
 - DMC-FZ70 / FZ72
 - DC-FZ80 / FZ81 / FZ82 / FZ83 / FZ85
 - DMC-FZ100
 - DMC-FZ150
 - DMC-FZ200
 - DMC-FZ300 / FZ330
 - DMC-FZ1000
 - DC-FZ1000 II / FZ1000M2 / DC-FZ10002
 - DMC-FZ2000 / FZ2500 / FZH1
 - DMC-FX150 / FX180
 - DMC-G1
 - DMC-G10
 - DMC-G2
 - DMC-G3
 - DMC-G5
 - DMC-G6
 - DMC-G7 / G70
 - DMC-G8 / G80 / G81 / G85
 - DC-G9
 - DC-G90 / G95 / G91 / G99
 - DC-G100 / G110
 - DMC-GF1
 - DMC-GF2
 - DMC-GF3
 - DMC-GF5

- DMC-GF6
- DMC-GF7
- DC-GF10 / GF90
- DMC-GH1
- DMC-GH2
- DMC-GH3
- DMC-GH4
- AG-GH4
- DC-GH5
- DC-GH5S
- DC-GH5 Mark II
- DMC-GM1
- DMC-GM1s
- DMC-GM5
- DMC-GX1
- DMC-GX7
- DMC-GX8
- DC-GX9 / GX7mkIII
- DMC-GX80 / GX85, DMC-GX7mkII
- DC-GX800 / GX850, DC-GF9
- DMC-L1
- DMC-L10
- DMC-LC1
- DMC-LF1
- DMC-LX1
- DMC-LX2
- DMC-LX3
- DMC-LX5
- DMC-LX7
- DMC-LX9 / LX10 / LX15
- DMC-LX100
- DC-LX100M2
- DC-S1
- DC-S1H
- DC-S1R
- DC-S5
- DMC-ZS40, DMC-TZ60 / TZ61
- DMC-ZS50, DMC-TZ70 / TZ71
- DMC-ZS60, DMC-TZ80 / TZ81 / TZ82 / TZ85
- DC-ZS70, DC-TZ90 / TZ91 / TZ92 / TZ93
- DC-ZS80, DC-TZ95 / TZ96 / TZ97
- DMC-ZS100 / ZS110, DMC-TZ100 / TZ101 / TZ110, DMC-TX1
- DC-ZS200 / ZS220, DC-TZ200 / TZ202 / TZ220, DC-TX2
- Pentax
 - *ist D
 - *ist DL
 - *ist DL2
 - *ist DS
 - *ist DS2
 - K10D
 - K20D
 - K100D
 - K100D Super
 - K110D
 - K200D
 - K2000/K-m
 - KP
 - K-x
 - K-r
 - K-01

- K-1
- K-1 Mark II
- K-3
- K-3 Mark II
- K-3 Mark III
- K-30
- K-5
- K-5 II
- K-5 IIs
- K-50
- K-500
- K-7
- K-70
- K-S1
- K-S2
- MX-1
- Q
- Q7
- Q10
- QS-1
- Optio S (secret menu or hack)
- Optio S4 (secret menu or hack)
- Optio 33WR (secret menu or hack)
- Optio 750Z (secret menu or hack)
- 645D
- 645Z
- PhaseOne
 - IQ140
 - IQ150
 - IQ160
 - IQ180
 - IQ180 IR
 - IQ250
 - IQ260
 - IQ260 Achromatic
 - IQ280
 - IQ3 50MP
 - IQ3 60MP
 - IQ3 80MP
 - IQ3 100MP
 - IQ3 100MP Trichromatic
 - IQ4 150MP
 - LightPhase
 - Achromatic+
 - H 10
 - H 20
 - H 25
 - P 20
 - P 20+
 - P 21
 - P 25
 - P 25+
 - P 30
 - P 30+
 - P 40+
 - P 45
 - P 45+
 - P 65
 - P 65+
- Photron BC2-HD

- Pixelink A782
- PtGrey GRAS-50S5C
- RaspberryPi
 - Camera
 - Camera V2
- Realme 3 Pro
- Ricoh
 - GR
 - GR II
 - GR III
 - GR IIIx
 - GR Digital
 - GR Digital II
 - GR Digital III
 - GR Digital IV
 - Caplio GX100
 - Caplio GX200
 - GXR Mount A12
 - GXR GR Lens A12 50mm F2.5 Macro
 - GXR GR Lens A12 28mm F2.5
 - GXR Ricoh Lens A16 24-85mm F3.5-5.5
 - GXR Ricoh Lens S10 24-72mm F2.5-4.4 VC
 - GXR Ricoh Lens P10 28-300 mm F3.5-5.6 VC
- Rollei d530flex
- RoverShot 3320af
- SMaL
 - Ultra-Pocket 3
 - Ultra-Pocket 4
 - Ultra-Pocket 5
- STV680 VGA
- SVS SVS625CL
- Samsung
 - EX1 / TL500
 - EX2F
 - GX-1L
 - GX-1S
 - GX10
 - GX20
 - Galaxy Nexus
 - Galaxy Note 9
 - Galaxy NX (EK-GN120)
 - Galaxy S3
 - Galaxy S6 (SM-G920F)
 - Galaxy S7
 - Galaxy S7 Edge
 - Galaxy S8 (SM-G950U)
 - Galaxy S9 (SM-G960F)
 - Galaxy S9+ (SM-G965U / 965F)
 - Galaxy S10 (SM-G973F)
 - Galaxy S10+ (SM-G975U)
 - NX1
 - NX5
 - NX10
 - NX11
 - NX100
 - NX1000
 - NX1100
 - NX20
 - NX200
 - NX210

- NX2000
- NX30
- NX300
- NX300M
- NX3000
- NX500
- NX mini / NXF1
- Pro815
- WB550 / WB560 / HZ15W
- WB2000 / TL350
- WB5000 / HZ25W
- S85 (hacked)
- S850 (hacked)
- Sarnoff 4096x5440
- Seitz
 - 6x17
 - Roundshot D3
 - Roundshot D2X
 - Roundshot D2Xs
- Sigma
 - fp
 - dp0 Quattro (DNG only)
 - dp1 Quattro (DNG only)
 - dp2 Quattro (DNG only)
 - dp3 Quattro (DNG only)
 - sd Quattro (DNG only)
 - sd Quattro H (DNG only)
- Sinar
 - eMotion 22
 - eMotion 54
 - eSpirit 65
 - eMotion 75
 - eVolution 75
 - 3072x2048 (Sinarback 23)
 - 4080x4080 (Sinarback 44)
 - 4080x5440
 - STI format
 - Sinarback 54
- Sony
 - ILCE-1 (A1)
 - ILCE-7 (A7)
 - ILCE-7M2 (A7 II)
 - ILCE-7M3 (A7 III)
 - ILCE-7M4 (A7 IV)
 - ILCE-7C (A7C)
 - ILCE-7R (A7R)
 - ILCE-7RM2 (A7R II)
 - ILCE-7RM3 (A7R III)
 - ILCE-7RM3A (A7R IIIA)
 - ILCE-7RM4 (A7R IV)
 - ILCE-7RM4A (A7R IVA)
 - ILCE-7S (A7S)
 - ILCE-7SM2 (A7S II)
 - ILCE-7SM3 (A7S III)
 - ILCE-9 (A9)
 - ILCE-9M2 (A9 II)
 - ILCA-68 (A68)
 - ILCA-77M2 (A77-II)
 - ILCA-99M2 (A99-II)
 - ILCE-3000 / 3500

- ILCE-5000
- ILCE-5100
- ILCE-6000
- ILCE-6100
- ILCE-6300
- ILCE-6400
- ILCE-6500
- ILCE-6600
- ILCE-QX1
- DSC-F828
- DSC-HX95
- DSC-HX99
- DSC-R1
- DSC-RX0
- DSC-RX0 II
- DSC-RX1
- DSC-RX1R
- DSC-RX1R II
- DSC-RX10
- DSC-RX10 II
- DSC-RX10 III
- DSC-RX10 IV
- DSC-RX100
- DSC-RX100 II
- DSC-RX100 III
- DSC-RX100 IV
- DSC-RX100 V
- DSC-RX100 VA
- DSC-RX100 VI
- DSC-RX100 VII
- DSC-V3
- DSLR-A100
- DSLR-A200
- DSLR-A230
- DSLR-A290
- DSLR-A300
- DSLR-A330
- DSLR-A350
- DSLR-A380 / A390
- DSLR-A450
- DSLR-A500
- DSLR-A550
- DSLR-A560
- DSLR-A580
- DSLR-A700
- DSLR-A850
- DSLR-A900
- NEX-3
- NEX-3N
- NEX-5
- NEX-5N
- NEX-5R
- NEX-5T
- NEX-6
- NEX-7
- NEX-C3
- NEX-F3
- NEX-VG20
- NEX-VG30
- NEX-VG900

- SLT-A33
- SLT-A35
- SLT-A37
- SLT-A55(V)
- SLT-A57
- SLT-A58
- SLT-A65(V)
- SLT-A77(V)
- SLT-A99(V)
- XCD-SX910CR
- IMX135-mipi 13mp
- IMX135-QCOM
- IMX072-mipi
- IMX214
- IMX219
- IMX230
- IMX298-mipi 16mp
- IMX219-mipi 8mp
- Xperia 5 II (XQ-AS52)
- Xperia L
- Xperia 1 III
- ZV-1 (DCZV1/B)
- ZV-E10
- Vivo X51 5G (V2006)
- Xiaomi
 - MI3
 - MI 8
 - MI 9 Lite
 - MI MAX
 - POCO M3
 - Redmi Note3 Pro
 - Redmi Note7
 - Redmi Note 8T
 - FIMI X8SE
- Xiaoyi YIAC3 (YI 4k)
- YUNEEC
 - CG03
 - CG03P
 - CG04
- Yi M1
- Zeiss ZX1
- Zenit M